

# Assembly Instructions

E.C. Woods, Inc. Outdoor Furniture

## Tools Needed


Cordless Drill

6" #2 Square drive Bit

## ACADIA




**STEP 1:** Lay all pieces on a smooth soft surface such as cardboard or carpet to help avoid scratching. We suggest using a 6" #2 square drive bit to fasten all screws (available at your local hardware store). **Be careful to not over tighten any of the fasteners.**

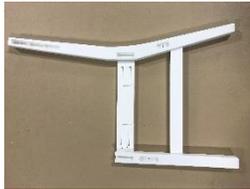

SIDE ASSEMBLY



SEAT ASSEMBLY

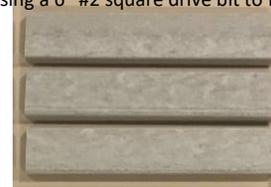

14 5/8" LONG BACK SUPPORTS




15 3/4" LONG BACK AND FRONT STRETCHERS, AND (2) SEAT SKIRTS



OPTIONAL ARMS

**STEP 2:** (a) Use a soft hammer (if necessary) to insert Back Supports and Stretchers in to Side Assembly. (b) Place the other Side Assembly on top of the Back Supports and Stretchers, starting at the top, use a soft hammer (if necessary) to seat the Side Assembly onto the Back Supports and Stretchers making sure that it is tight. (c) Secure the Side Assembly to the Stretchers using the 2" stainless steel flat head screws provided. Flip the chair over and secure the other side with the 2" stainless steel flat head screws provided.

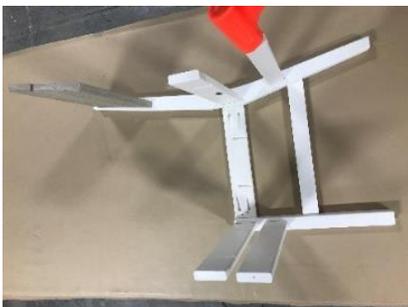

(a)



(b)



(c)


**STEP 3: (OPT ARMS)** (d) Fasten the Arm Assembly to the back leg thru the pocket hole in the Arm Assembly into the predrilled hole in the leg using the 1 ½" stainless steel round head screw provided. (e) Line the top of the arm support up with the top of the side seat skirt and the back side of the front leg and (f) secure with the 2" stainless steel flat head screws provided thru the predrilled holes. (x2)



(d)



(e)

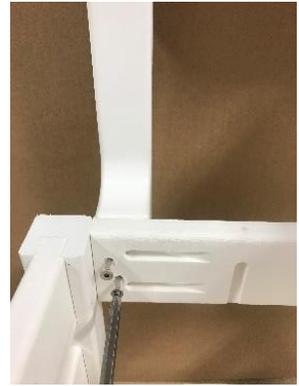

(f)

**STEP 4:** (g) Place the seat onto the chair base being sure to have the pocket holed side down. Push the seat all of the way up against the back legs. (h) Center the front of the seat and then secure it to the seat skirts with the 1 ½" stainless steel round head screws provided thru the pocket holes in the seat skirts (**DO NOT OVER TIGHTEN**).



(g)



(h)

**STEP 5:** Enjoy your new Acadia Chair



**Arm Chair**



**Side Chair**

