

Assembly Instructions

E.C. Woods, Inc. Outdoor Furniture

BAR/COUNTER SWIVEL CHAIR

Tools Needed

Cordless Drill

6" #2 Square Drive Bit

7/16" Nut Setter

Tape Measure



STEP 1: (a) Lay all pieces (as needed) on a smooth soft surface such as cardboard or carpet to help avoid scratching. **Be careful to not over tighten any of the fasteners.**



(a)

STEP 2: (b) Fasten the swivel mount to the top of the legs using the 3" stainless steel flat head screws provided thru the two outside holes (x4). Keep them slightly loose so the footrest can be slid over later. (c) Press the two leg assemblies together. (d) Stand the assembly up and slide the footrest over the legs with the screw pockets facing down. (e) Tighten the screws that were left loose in (b).



(b)



(c)



(d)




(e)

STEP 3: (f) Flip the assembly upside down and fasten the footrest to the chair legs, making sure to position the seams of the footrest on the center of the legs, using the 3" stainless steel flat head screws provided. (g) Flip assembly over and attach the swivel to the leg assembly making sure that the side that says **Bottom** is facing down. Fasten using the 1¼" stainless steel lags provided thru the pre-drilled holes. It is easier to put all four lags in before tightening any of them completely. (h) Place the seat assembly upside down and then place the base assembly upside down on top of it making sure that the side of the swivel marked **Front Top** is facing the front of the chair assembly. Line the slots up in the swivel with the pre-drilled holes in the chair assembly. (i) Fasten the swivel to the chair assembly using the 1¼" stainless steel lags provided. It is easier to start all four lags before tightening any of them completely.



(f)

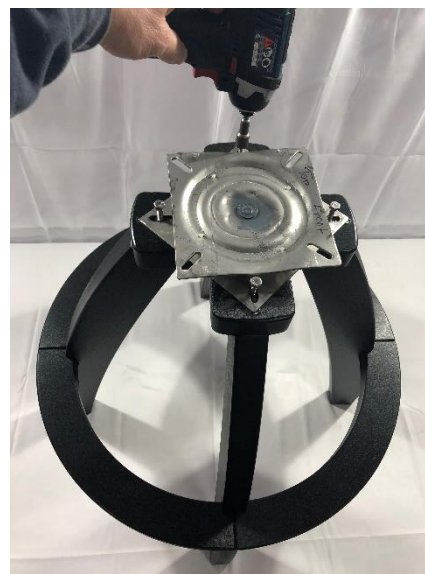

(g)



(h)



(i)

