

Assembly Instructions

E.C. Woods, Inc. Outdoor Furniture

DINING HEIGHT SWIVEL CHAIR

Tools Needed

Cordless Drill

6" #2 Square Drive Bit

7/16" Nut Setter

Tape Measure



STEP 1: (a) Lay all pieces (as needed) on a smooth soft surface such as cardboard or carpet to help avoid scratching. **Be careful to not over tighten any of the fasteners.**



(a)

STEP 2: (b) Attach the swivel mount to the top of the legs using the 3" stainless steel flat head screws provided thru the two outside holes (x4). (c) Place the two leg assemblies together. (d) Fasten the footrest to the chair legs, making sure to position the seam of the footrest on the center of the leg, using the 2" stainless steel flat head screws provided. (e) Flip assembly over and attach the swivel to the leg assembly, making sure that the side that says **Bottom** is facing down.



(b)



(c)



(d)




(e)

STEP 3: (f) Fasten the swivel using the 1¼" stainless steel lags provided thru the pre-drilled holes. It is easier to put all four lags in before tightening any of them completely. (g) Place the chair assembly upside down and then place the base assembly upside down onto it making sure to have the side labeled **Front Top** toward the front of the chair assembly. (h) Line the slots up in the swivel with the pre-drilled holes in the chair assembly. (i) Fasten the swivel to the chair assembly using the 1¼" stainless steel lags provided. It is easier to start all four lags before tightening any of them completely.




(f)

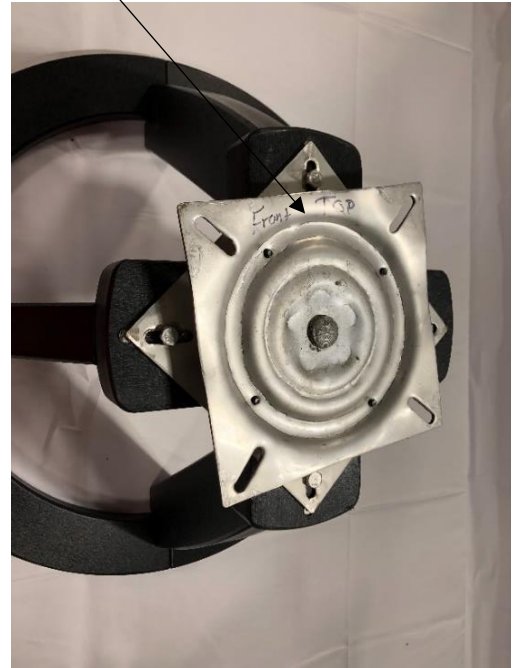

(g)



(h)

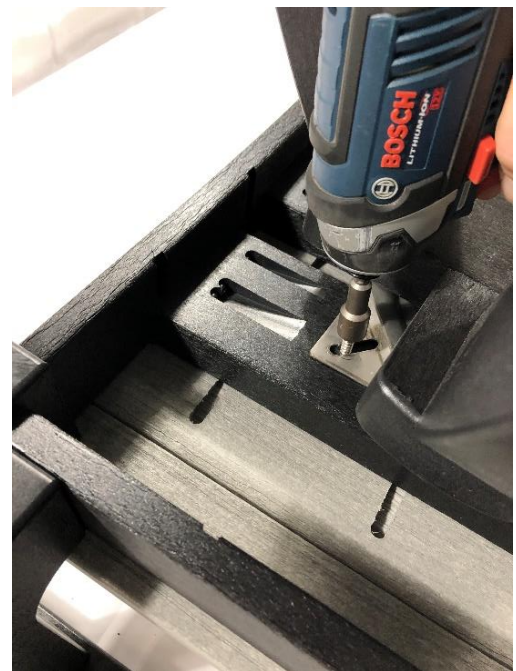

(i)

