

Assembly Instructions

E.C. Woods, Inc. Outdoor Furniture

ASHEVILLE END TABLE

Tools Needed

Cordless Drill

6" #2 Square Drive Bit



(a)

STEP 1: (a) Lay all pieces on a smooth soft surface such as cardboard or carpet to help avoid scratching. We suggest using a 6" #2 square drive bit to fasten all screws (available at your local hardware store). **Be careful to not over tighten any of the fasteners.**

STEP 2: (b) (x2) Insert the Table Top Supports (short) and Shelf Supports (long) into the mortises in one Side Assembly with the long point to the bottom. (c) Fasten Supports with the 1 ½" stainless steel round head screws provided.



(b)



(c)

STEP 3: (d) Place the Bottom Shelf in place with the screw pockets facing down. (e) Place the other Side Assembly face down and rotate the subassembly on to it, being sure to hold the Bottom Shelf in place. Then Insert the Supports into the mortises on the Side Assembly and fasten with the 1 ½" stainless steel round head screws provided.



(d)



(e)


STEP 4: (f) Center the Bottom Shelf and fasten thru the screw pockets with the 1 ½" stainless steel round head screws provided. (g) Line the Table Top up by placing the top of the legs into the mortises in the bottom of the Table Top. (h) Fasten the Table Top thru the screw pockets using the 1 ½" stainless steel round head screws provided.



(f)



(g)

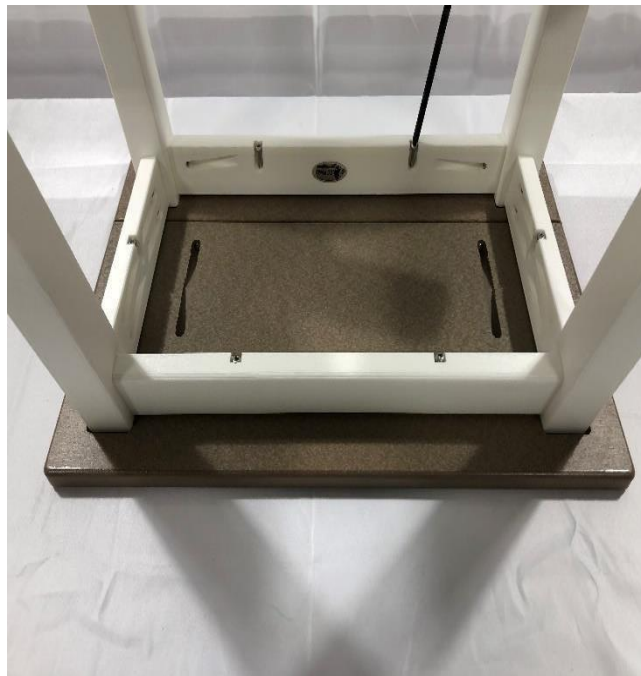

(h)



ecwoutdoorfurniture.com