

# Assembly Instructions

E.C. Woods, Inc. Outdoor Furniture

## BALCONY TABLE

### Tools Needed

Cordless Drill

6" #2 Square Drive Bit

Tape Measure




(a)

**STEP 1:** (a) Lay all pieces on a smooth soft surface such as cardboard or carpet to help avoid scratching. We suggest using a 6" #2 square drive bit to fasten all screws (available at your local hardware store). **Be careful to not over tighten any of the fasteners.**

**STEP 2:** (b) Place the cross bars into the mortises of a leg assembly. (c) Fasten the cross bars with the 3" stainless steel flat head screws provided. (d) Insert the cross bars in to the other leg assembly and fasten with the 3" stainless steel flat head screws provided. (e) Place the table top upside down then center the assembled table base between the table top skirts.



(b)

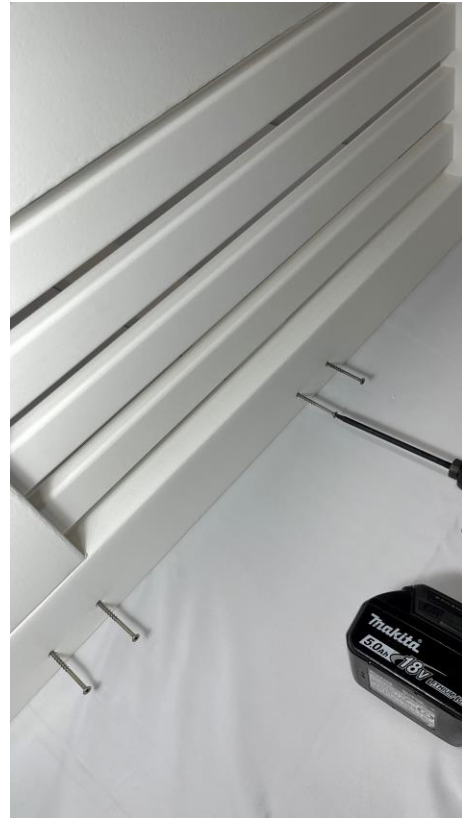

(c)



(d)



(e)

**STEP 3:** (f) Secure the Leg Assembly to the bottom of the table top using the 1 ½” stainless steel flat head screws provided. (g) Fasten the feet to the leg assembly with the 1 ½” stainless steel flat head screws provided.



(f)



(g)



[ecwoutdoorfurniture.com](http://ecwoutdoorfurniture.com)