

Assembly Instructions

E.C. Woods, Inc. Outdoor Furniture

CALISTOGA COFFEE/END TABLE

Tools Needed

Cordless Drill

6" #2 Square Drive Bit

Tape Measure



STEP 1: (a) Lay all pieces on a smooth soft surface such as cardboard or carpet to help avoid scratching. We suggest using a 6" #2 square drive bit to fasten all screws (available at your local hardware store). **Be careful to not over tighten any of the fasteners.**



(a)

STEP 2: (b) Place one of the side assemblies with the wider legs on a clean soft surface with the pocket holes facing up (c) (If you are assembling the coffee table go to STEP 4 (h) first) Line up the outside of the end assembly with the outside of the side assembly and then fasten the end assembly thru the countersunk holes to the side assembly using the 1 ½" stainless steel round head screws provided.



(b)




(c)

STEP 3: (d) Place the table top on a clean soft surface upside down and center the completed leg assembly upside down on the bottom of the table top. (e) Fasten the leg assembly to the table top using the 1 ½" stainless steel round head screws provided.



(d)

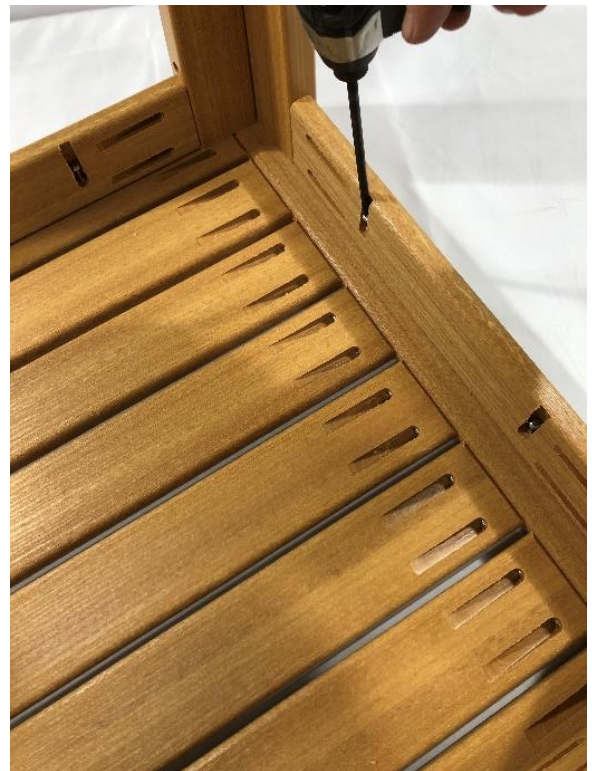

(e)

STEP 4: Coffee Table ONLY (f) Remove the aluminum reinforcing strips from the side assembly and set off to the side for later use. (g) Install the reinforcing strips using the 5/8" stainless steel round head screws provided.



(f)



(g)

STEP 5: (h) Center the support, using the cardboard spacer provided, and fasten the ends with the 1 1/2" stainless steel pan head screws provided. (i) Fasten the middle part of the support to the table slats using the 1 1/2" stainless steel round head screws provided.



(h)



(i)

