



ecwoutdoorfurniture.com

## CORNER BAR END PANEL INSTALLATION INSTRUCTIONS




**STEP 1:** (a) Lay all pieces on a smooth soft surface, such as cardboard, to help avoid scratching. We suggest using a 6" #2 square drive bit to fasten all screws (available at your local hardware store). **Be careful to not over tighten any of the fasteners.**

**STEP 2:** (b) Attach the 3 1/2" x 1 1/2" x 29" top piece to the Bar Corner Top using the supplied 1 1/4" stainless steel flat head screws.

**STEP 3:** (c) Line up the outside of the End Panel with the Corner Bar front and (d) fasten with the supplied 1 1/2" stainless steel round head screws.

**STEP 4:** (e) Place the side piece 2 3/8" from the back of the Bar Corner Top and (f) 9/16" from the outside of the Bar Corner Top.

**STEP 5:** (g) Fasten the End Panel to the top piece using the supplied 1 1/2" stainless steel round head screws.

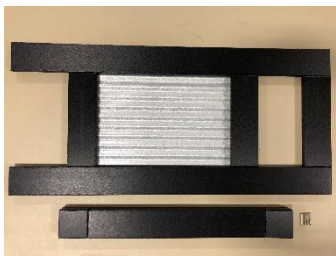

(a)



(b)



(c)



(d)



(e)



(f)



(g)

E.C. Woods, Inc. Outdoor Furniture