

Assembly Instructions


E.C. Woods, Inc. Outdoor Furniture

FREEPORT CHAIR

Tools Needed

Cordless Drill

6" #2 Square Drive Bit

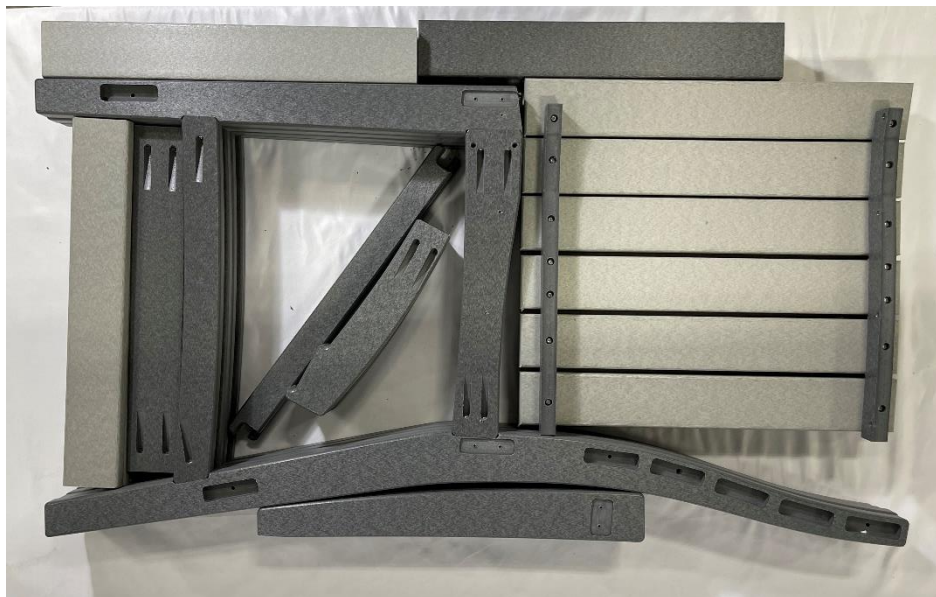

(a)

STEP 1: (a) Lay all pieces on a smooth soft surface such as cardboard or carpet to help avoid scratching. We suggest using a 6" #2 square drive bit to fasten all screws (available at your local hardware store). **Be careful to not over tighten any of the fasteners.**

STEP 2: (b) Use a soft hammer (if necessary) to insert the seat skirts (**w/pocket holes**), stretchers, and back slats in to the mortises in the side assembly. **(Counter and bar height)** Place the front lower stretcher with the holes facing down. (c) Place the other side assembly on top of the subassembly, with the mortises facing down, and then line the seat skirts, stretchers, and back slats up with the mortises in the side assembly and gently pound them in using your hand or a soft hammer. Fasten with the 1 3/4" stainless steel flat head screws thru the side assembly and the 1 1/2" pan head stainless steel screws thru the pocket holes. Flip the assembly over and repeat.



(b)



(c)

STEP 3: (OPT ARMS) (d) Place the arms and arm supports on a smooth soft surface. (e) Fasten the arm supports to the arms using the 1 1/2" stainless steel pan head screws provided. Make sure that the return on the arm support is pointed in the same direction as the inside curve of the arm and that the screw pockets on the arm support are facing towards the long portion of the arm.



(d)



(e)

(f)(g) Line the notch of the arm support return up with the bottom of the side skirt directly behind the front leg.



(f)



(g)

(h) (2x) Attach the arm support to the chair side skirt using the 1 3/4" stainless steel flat head screws provided thru the predrilled holes. (i) (2x) Attach the arm to the back leg thru the pre drilled holes using the 2" stainless steel pan head screws provided.



(h)



(i)

STEP 4 (j) Insert the back of the seat assembly between the seat side rails and tight to the back legs. (k) Push the seat assembly down making sure that it is tight against the seat side rails.



(j)



(k)

(l) Secure the seat to the side rails by using 1 ¼" stainless steel flat head screws provided. (m) **(Counter & Bar height)** Secure the footrest to the front lower stretcher by using the 1 ¼" stainless steel pan head screws provided.



(l)



(m)

