

Assembly Instructions


E.C. Woods, Inc. Outdoor Furniture

TABLE

Tools Needed

Cordless Drill

2" #2 Square Drive Bit

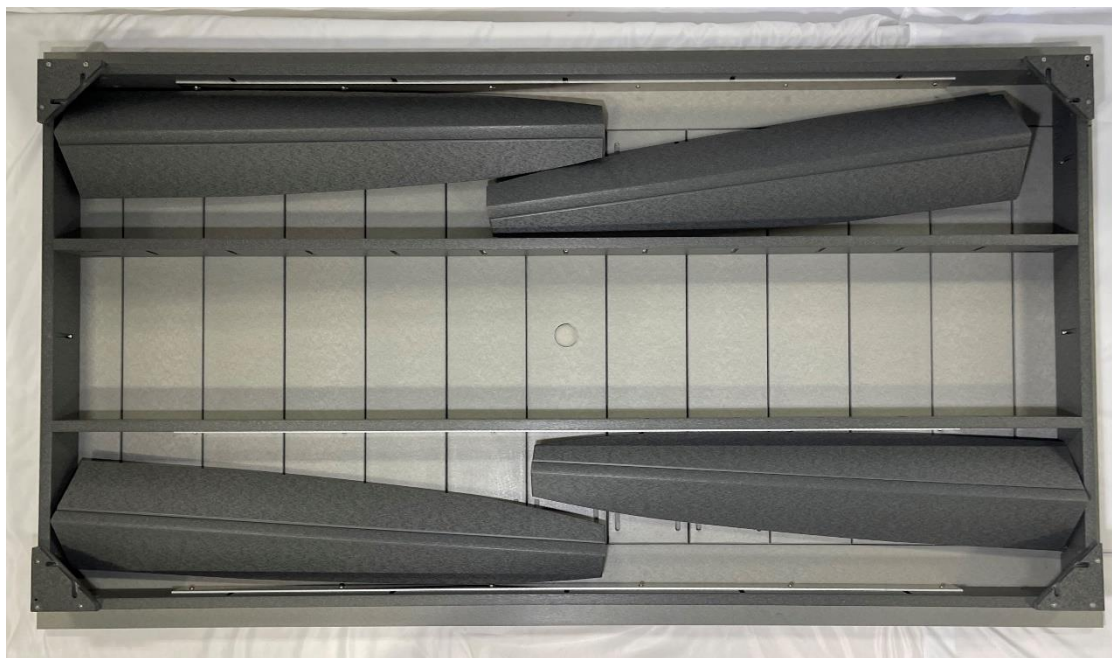

(a)

STEP 1: (a) Lay all pieces on a smooth soft surface such as cardboard or carpet to help avoid scratching. We suggest using a 2" #2 square bit to fasten all screws (available at your local hardware store). **Be careful to not over tighten any of the fasteners.**

STEP 2: (b) (x4) Place the legs on to the bottom of the table top and skirt. (c) Fasten the legs with the 1 ½" stainless steel flat head screws provided in to the predrilled holes in the table skirt. (d) Then fasten the legs with the 1 ½" stainless steel pan head screws provided in to the predrilled holes in the angle brace.



(b)



(c)



(d)

