

Assembly Instructions

E.C. Woods, Inc. Outdoor Furniture

LIBERTY ADIRONDACK

Tools Needed

Cordless Drill

6" #2 Square Drive Bit



STEP 1: Lay all pieces on smooth, soft surface, such as cardboard, to avoid scratching. **Be careful to not over tighten any of the fasteners.**



STEP 2: (a) Remove the footrest from the seat assembly and place it to the side to reinstall after your chair is assembled. (b) Place 2 - 3" stainless steel flat head screws in the seat assembly thru the predrilled holes in the footrest slide and line them up with the predrilled holes in the leg assembly and leave them loose. (c) Place the 2" stainless steel flat head screw in the back leg above the footrest slide and then secure all the screws. (d) Place the front leg spreader into the mortise in the front leg and secure it with 2 - 1 1/2" stainless steel pan head screws (flip assembly over and repeat for the other side).




(a)



(b)



(c)

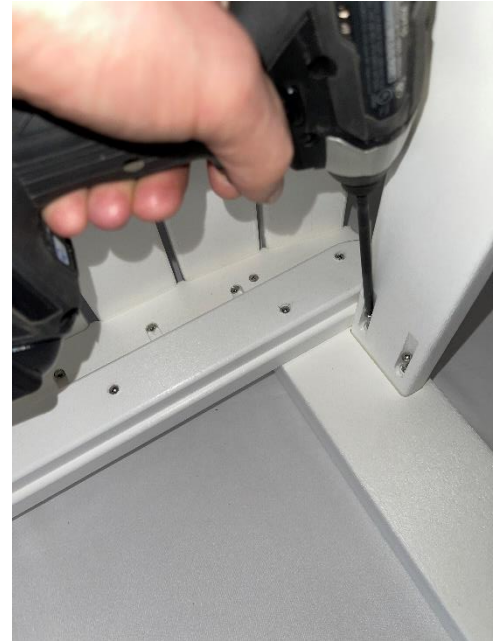

(d)

STEP 3: (e) (x2) Line up the side of the bottom back support with the outside of the back leg and up against the notch in the back leg then secure it thru the predrilled holes with 2 – 2" stainless steel flat head screws. (f & g) (x2) Place a 2" stainless steel pan head screw thru the pocket hole in one of the arms and line it up with the predrilled hole in the middle back support and secure. (h) Reinstall the footrest and relax in your new Liberty Adirondack chair.



(e)



(f)



(g)



(h)

