

# Assembly Instructions

E.C. Woods, Inc. Outdoor Furniture


## PORT ROYAL TABLE

### Tools Needed

Cordless Drill

6" #2 Square Drive Bit

Soft Hammer

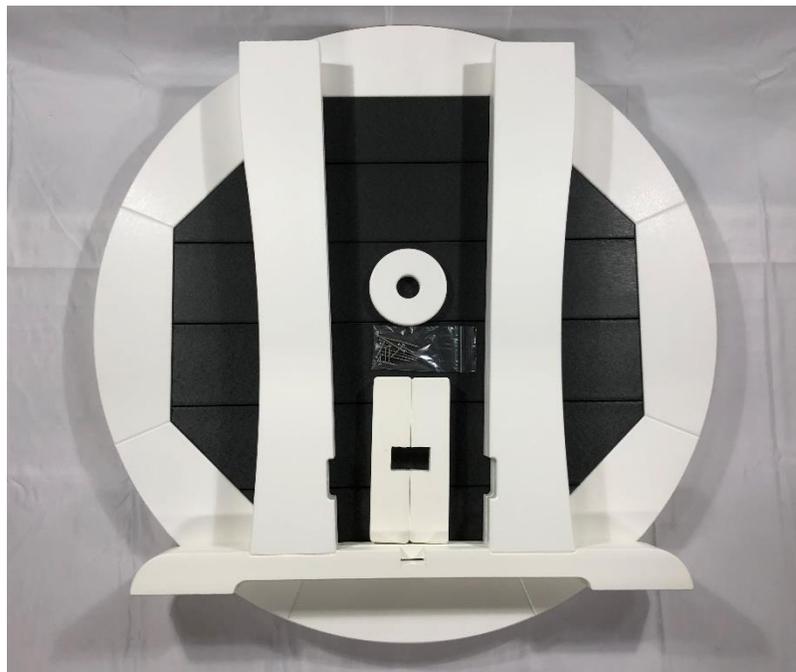

(a)

**STEP 1:** (a) Lay all pieces on a smooth soft surface such as cardboard or carpet to help avoid scratching. We suggest using a 6" #2 Square bit to fasten all screws (available at your local hardware store). **Be careful to not over tighten any of the fasteners.**


**STEP 2:** (b) Put the legs together with the notches in the feet facing each other. Some pressure may be required to get the feet fully seated. (c) Put the leg braces together with the notches in the braces facing each other. Some pressure may be required to get the braces fully seated. Be careful to not break the braces when putting them together. (d) Center the umbrella holder on the leg braces. (e) Secure the umbrella holder to the leg braces using the 2" round head stainless steel screws provided.




(b)



(c)

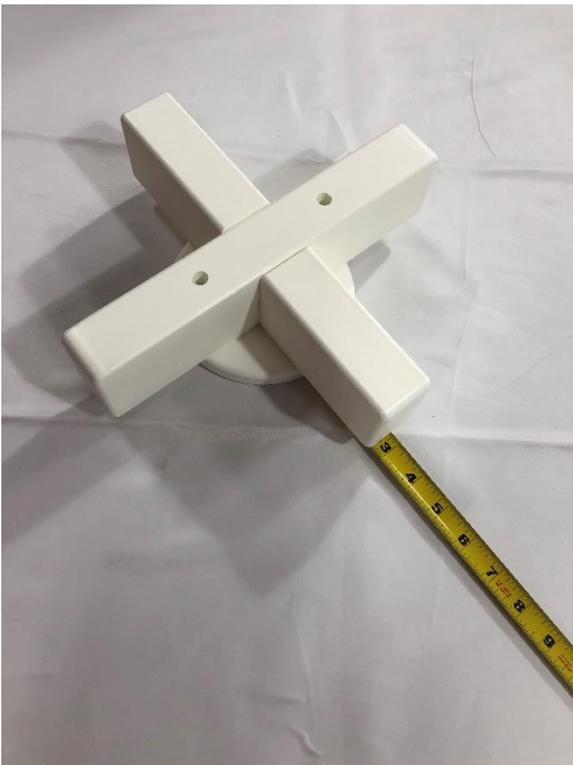


(d)

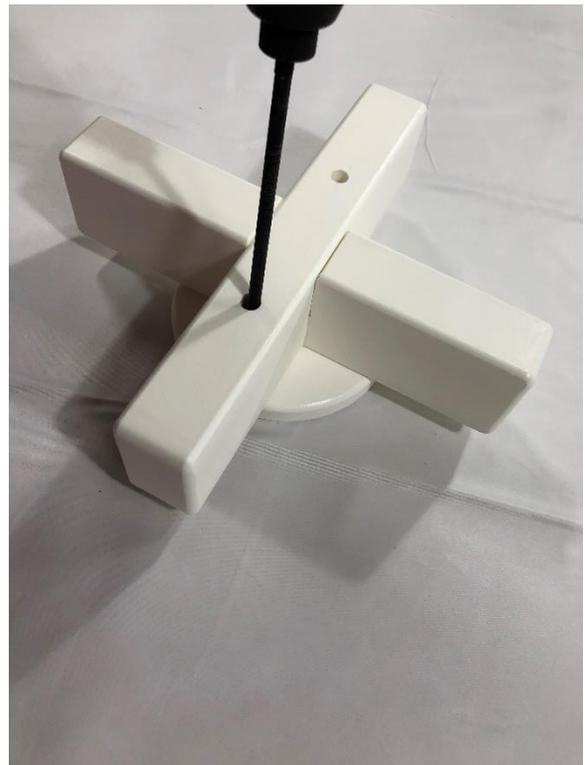

(e)

**STEP 3: NOTE (f) Dining height will not have leg braces so the umbrella holder will mount directly to the top of the feet. (g) Put the leg braces in the notches in the legs making sure to work the leg braces into the notches a little bit at a time all of the way around (h) until they are all flush. (i) Fasten the leg braces to the legs with the 3" flat head stainless steel screws provided.**

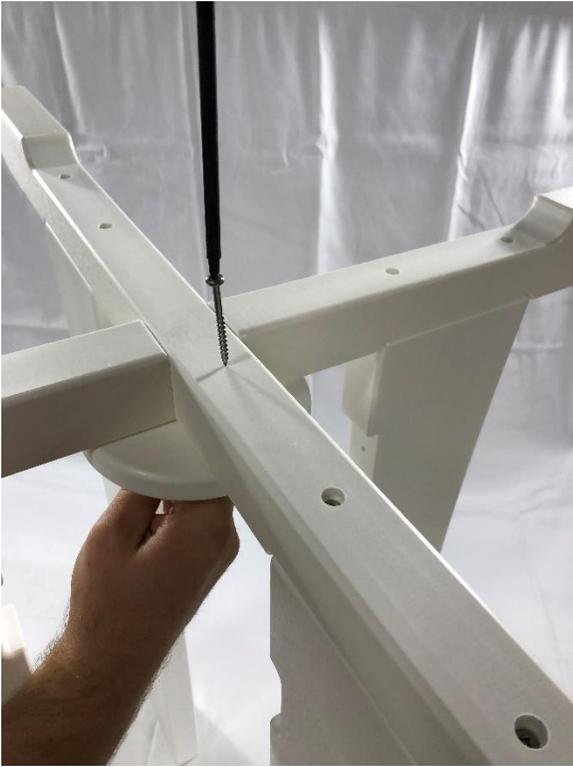

(f)



(g)




(h)



(i)

**STEP 4:** (j) Place the table top upside down on a clean soft surface (k) Place the leg assembly upside down into the frame of the table and center the legs (i) Fasten the frame to the legs with the 1 ¼" round head stainless steel screws provided.

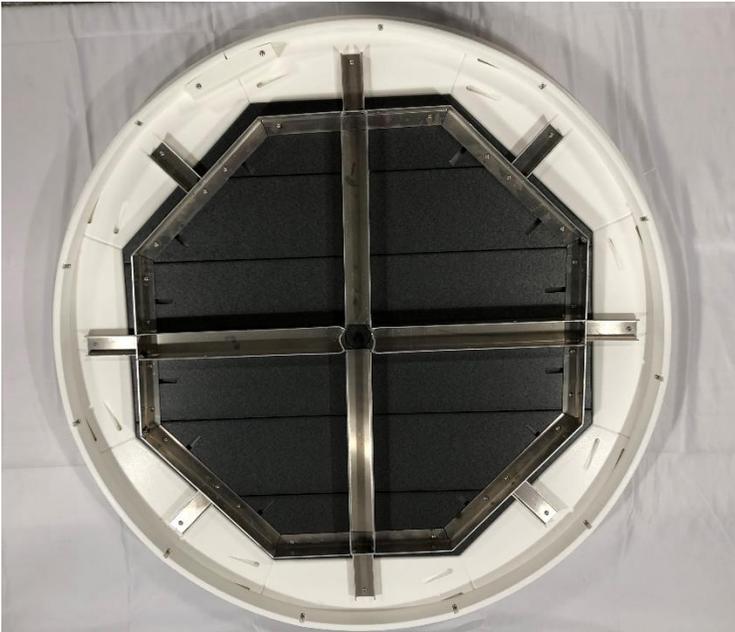

(j)



(k)



(l)

