

Assembly Instructions

E.C. Woods, Inc. Outdoor Furniture

ST. CROIX BENCH

Tools Needed

Cordless Drill

6" #2 Square Drive Bit

Soft Hammer



(a)

STEP 1: (a) Lay all pieces on a smooth soft surface such as cardboard or carpet to help avoid scratching. We suggest using a 6" #2 Square bit to fasten all screws (available at your local hardware store). **Be careful to not over tighten any of the fasteners.**

STEP 2: (b) Put the leg support into the mortises of the legs. A soft hammer may be required to get the leg support fully seated into the leg. (c) Secure the leg support to the legs using the 2" flat head stainless steel screws provided. (d) Rotate the leg assembly and place it on the upside down bench seat in between the seat skirts tight to the bottom of the seat. (e) Secure the leg assembly to the seat using the 1 1/2" round head stainless steel screws provided.



(b)



(c)




(d)



(e)

STEP 3: (f) Fasten the seat skirt to the legs using the 2" flat head stainless steel screws provided.

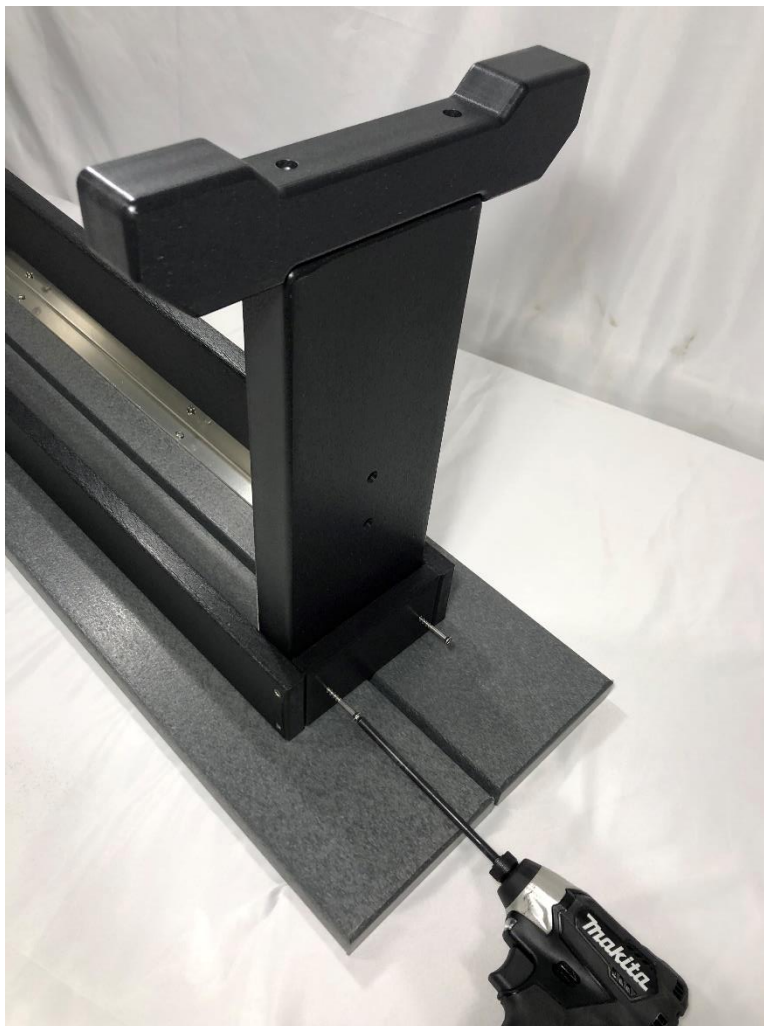

ecwoutdoorfurniture.com