

Assembly Instructions


E.C. Woods, Inc. Outdoor Furniture

TACOMA/ACADIA TABLE

Tools Needed

Cordless Drill

7/16" Nut Setter

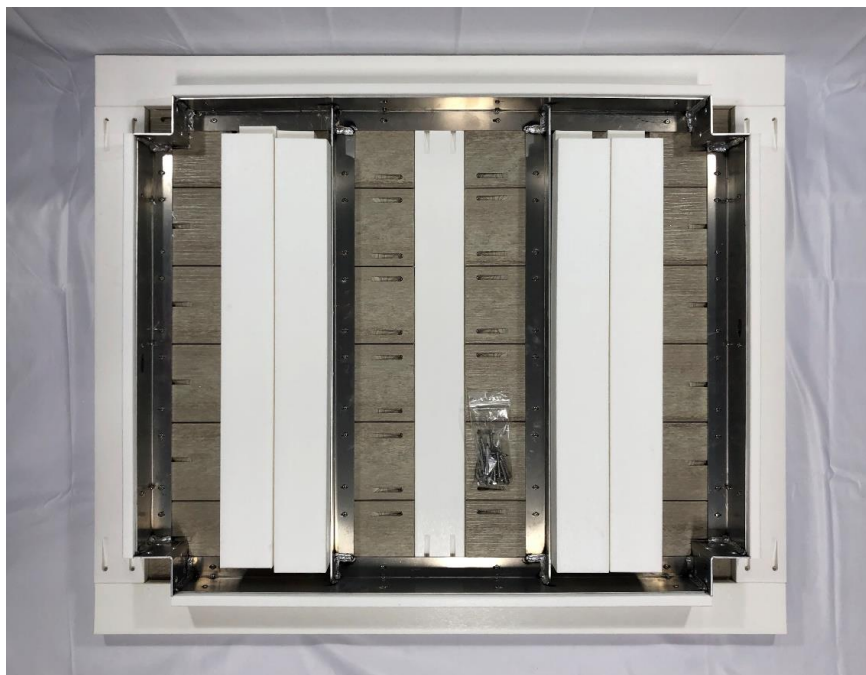

(a)

STEP 1: (a) Lay all pieces on a smooth soft surface such as cardboard or carpet to help avoid scratching. We suggest using a 7/16" Nut Setter bit to fasten all lag bolts (available at your local hardware store). **Be careful to not over tighten any of the fasteners.**

STEP 2: (b) (x4) (**ACADIA**) Place the legs into the pockets of the table frame with the pre drilled holes towards the middle of the table. (**TACOMA**) Place the tall portion of the leg towards the middle of the table. (c) Firmly hold the legs in place then fasten them with the 2" stainless steel lag bolts provided into the predrilled holes.



(b)



(c)

