

Installation Instructions

E.C. Woods, Inc. Outdoor Furniture


TACOMA BAR CORBEL

Tools Needed


Cordless Drill

6" #2 Square Drive Bit


Tape Measure

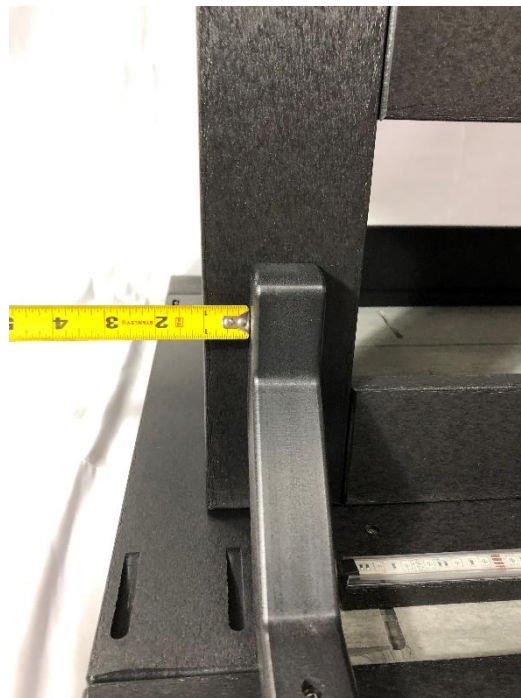

(a)

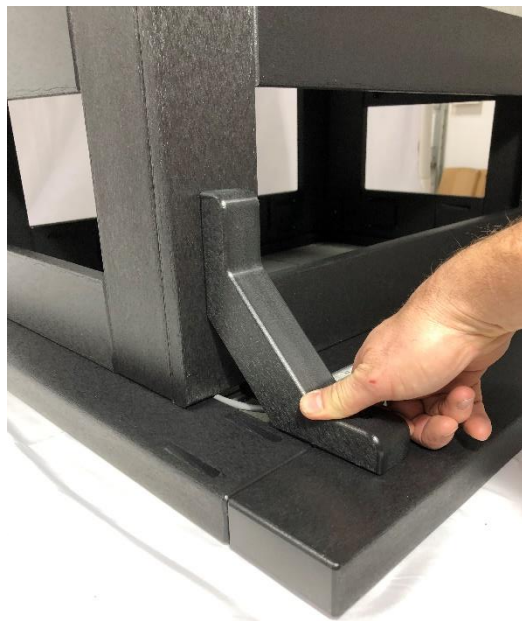

(b)

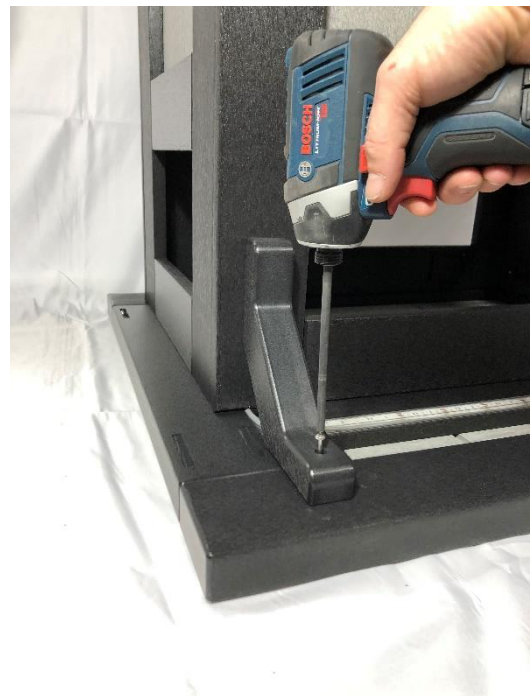

(c)

STEP 1: Be careful to not over tighten any of the fasteners. (a) Center the Corbel on the stile. (b) Press down on the Corbel holding it square with both the Bar Top and the stile. (c) Fasten the Corbel to the Bar Top using the 1 ½" stainless steel round head screws provided.



(d)

STEP 2: (d) From the inside, fasten the Corbel thru the pre drilled holes using the 1 ½" stainless steel round head screws provided.



ecwoutdoorfurniture.com