

Installation Instructions

E.C. Woods, Inc. Outdoor Furniture

TACOMA BAR UMBRELLA SUPPORT

Tools Needed

Cordless Drill

6" #2 Square Drive Bit

Tape Measure



(a)




(b)

STEP 1: Be careful to not over tighten any of the fasteners. (a) Lay all pieces on a smooth soft surface such as cardboard or carpet to help avoid scratching. (b) Fasten the umbrella support top guide to the back bottom of the bar top using the 1 ½" stainless steel flat head screws provided.



(c)

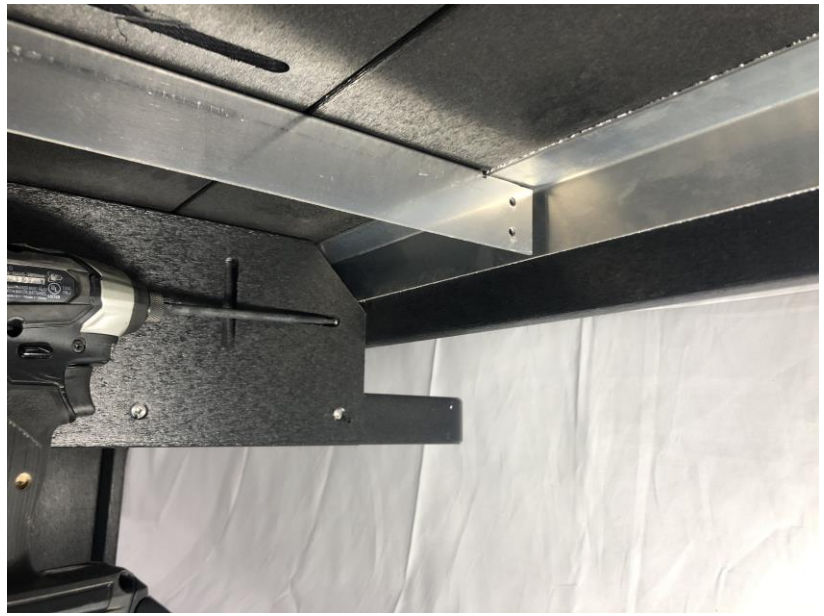

(d)

STEP 2: (c) Align the umbrella support bottom support with the top guide and fasten to the bottom of the bar shelf using the 1 ½" stainless steel round head screws provided. (c) Fasten the umbrella support bottom support to the back of the back bar bottom rail using the 1 ½" stainless steel round head screws provided.



(e)

STEP 3: (e) SECURE BAR MODULE TO THE SURFACE THAT IT IS SITTING ON WITH THE APPROPRIATE FASTENERS FOR YOUR SURFACE TO AVOID TIP OVER BEFORE INSERTING THE UMBRELLA INTO THE UMBRELLA HOLDER.

