

Assembly Instructions

E.C. Woods, Inc. Outdoor Furniture

WELLS/WILMINGTON LIFT-N-SET™ ADJUSTABLE SEAT ADIRONDACK

Tools Needed

Cordless Drill

6" #2 Square Drive Bit

5/32" Allen Wrench

7/16" Wrench




STEP 1: Lay all pieces on smooth, soft surface, such as cardboard, to avoid scratching. **Be careful to not over tighten any of the fasteners.**



STEP 2: (a) (x2) Secure the front leg assembly to the arm rest using 4 - 1 ½" stainless steel flat head screws (making sure that the bottom of the leg is angled towards the front of the arm rest). (b) Place the front leg spreader in the mortise of one of the front legs and secure with 2 - 1 ½" stainless steel round head screws then repeat to the other front leg. (c) (x2) Secure the front legs to the back legs by using 3 - 2 ¼" allen head bolts with a 5/32" allen wrench. (d) Place the back assembly into the recess in the back leg assembly.



(a)

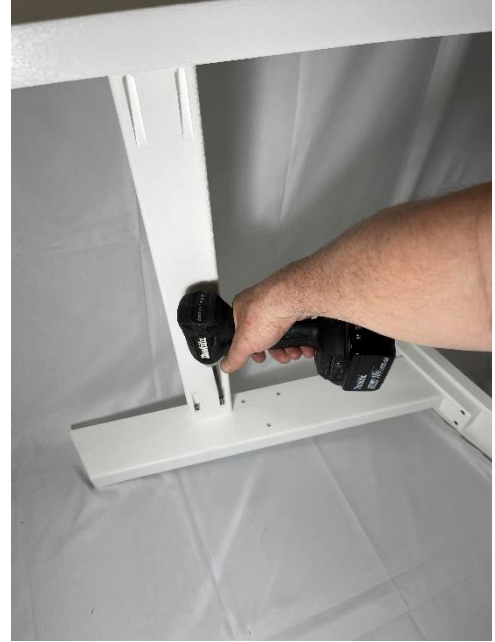

(b)



(c)



(d)

STEP 3: (e) (x2) Line up the side of the back assembly with the outside of the back leg assembly then secure it thru the predrilled holes with 2 – 2” stainless steel flat head screws. (f) (x2) Place a 3 ½” stainless steel allen head bolt thru the predrilled hole in one of the arms and line it up with the predrilled hole in the side back support and secure with stainless steel lock nuts and washers.



(e)



(f)

