

Assembly Instructions

E.C. Woods, Inc. Outdoor Furniture

WESTBROOK

Tools Needed

5/32" Allen Wrench

7/16" Wrench

6" #2 Square Drive Bit



STEP 1: Lay all pieces on smooth, soft surface, such as cardboard, to avoid scratching. **Be careful to not over tighten any of the fasteners.**




STEP 2: (a) (x2) Secure the leg assembly to the seat using 2 - 3" stainless steel allen head bolts through the predrilled holes in the leg assembly and seat (making sure that the wider end of the arm rest is towards the front of the seat). (b) Place a stainless steel washer and lock nut on the back of the bolt and tighten with a 7/16" wrench and a 5/32" allen wrench until the head of the bolt sits tight to the leg. (c) (x2) Fasten the back assembly to the seat by using 2 - 2" stainless steel flat head screws. (d)(e) (x2) Line a 3 1/2" stainless steel allen head lag up with the predrilled hole in the middle back support and fasten the armrest to the center back support with a 5/32" allen wrench.




(a)



(b)

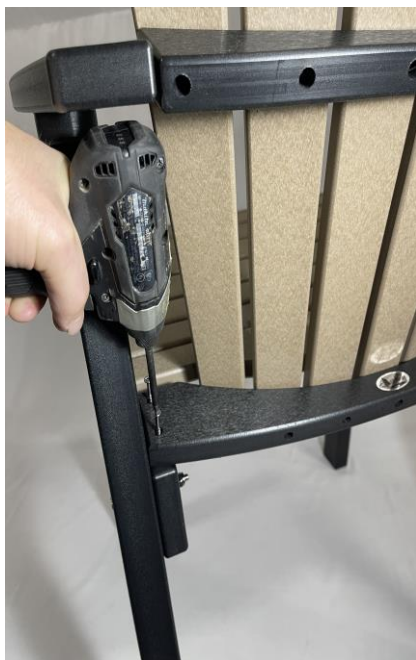

(c)

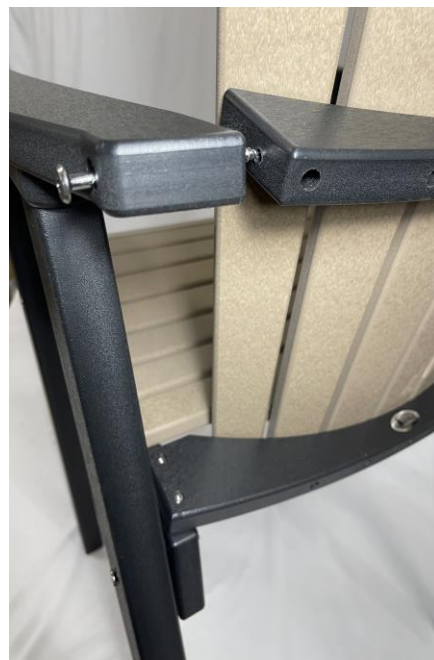

(d)



(e)

STEP 3: For counter and bar height only. (f) Place the footrest assembly between the chair legs with the footrest to the front of the chair and (x4) line up with the 1 3/4" flat head stainless steel screws through the predrilled holes in the footrest assembly and the peck holes in the leg. (g) (x4) Secure the footrest to the leg.



(f)



(g)

