

# Assembly Instructions

E.C. Woods, Inc. Outdoor Furniture

## WESTPORT TABLE


### Tools Needed

Cordless Drill

6" #2 Square Drive Bit

Tape Measure

Soft Hammer

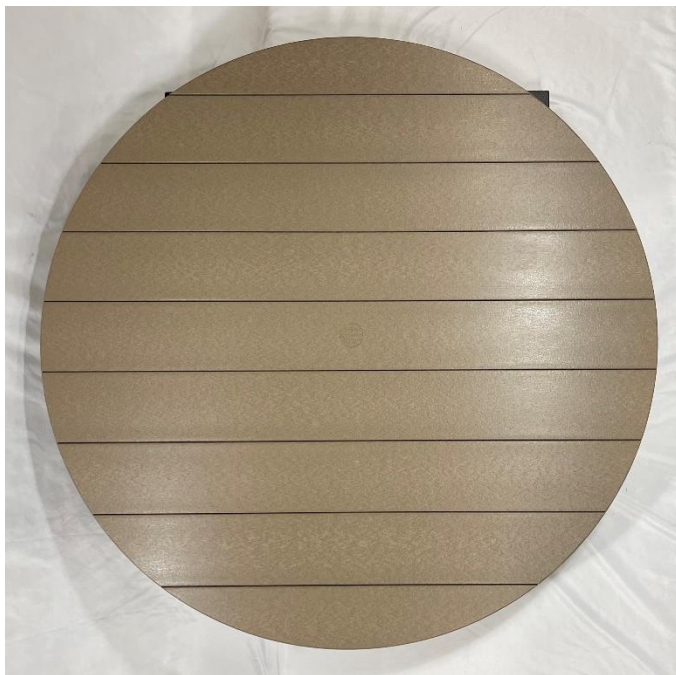

(a)

**STEP 1:** (a) Lay all pieces on a smooth soft surface such as cardboard or carpet to help avoid scratching. We suggest using a 6" #2 Square bit to fasten all screws (available at your local hardware store). **Be careful to not over tighten any of the fasteners.**

**STEP 2:** (b) (4x) Insert the side stretchers in to the mortises in a leg assembly and secure them with 1 ½” stainless steel round head screws. (c) Insert the stretchers in to the mortises of the other leg and secure them with 1 ½” stainless steel round head screws. (d) Stand the leg assembly upside down and center the umbrella support on the bottom of the feet. (e) Secure the umbrella support to the feet through the aluminum bracket with 1 ¼” stainless steel flat head screws. **NOTE:** The stop on the umbrella support is off center to allow for drainage.



(b)



(c)



(d)



(e)

**STEP 3 For a square top go to (h) & (i)** (f) Secure the leg assembly to the bottom of the table top through the pocket holes using 1 ½" stainless steel round head screws with the wide part of the leg in line with the table top boards. (g) Secure the aluminum braces to the legs through the predrilled holes in the braces with 1 ¼" stainless steel round head screws. (h) Center the leg assembly on the bottom of the table top. (i) Secure the leg assembly to the table top the same as in (f) & (g).



(f)



(g)



(h)



(i)

